

Machines with Erickson #30 Quick Change or Universal #200 Quick Change Spindles

If your milling machine attachment was manufactured after January 1, 1985 and has either an Erickson #30 or a Universal #200 quick change spindle, the manufacturer has drilled and tapped four #8-32 holes in the nose cap of the spindle for mounting the guard.

ERICKSON SPINDLE

If the nose cap mounting ring has not been installed, the following procedure will apply:

1. Remove the spindle locknut. This is done by removing the long button head black finish screw, which is normally left of the cadmium-finished button head screw on the locknut of the spindle. This will allow you to unscrew the locknut by turning it counter-clockwise.
2. Place the nose cap mounting ring "O" up against the quill nose cap and install the four button head cap screws "M".

- NOTE -

The counterbored side of the nose cap mounting ring fits against the nose cap.

3. Lower the quill. Place the clamping ring "P" underneath the top of the guard "Q" and position the guard under the spindle.
4. Install the four socket head cap screws "N" through the nose cap mounting ring and thread them into the clamping ring.
5. Align the front of the guard parallel to the front of the table. Tighten the screws clamping the guard in position.
6. Reinstall the quick change locknut. Refer to assembly instructions.

If the nose cap mounting ring has been installed, omit steps 1, 2, and 6.

UNIVERSAL #200 QUICK CHANGE SPINDLES

The quick change locknut is not to be removed. To install the spindle safeguard, follow the preceding steps listed above: 2, 3, 4 and 5.

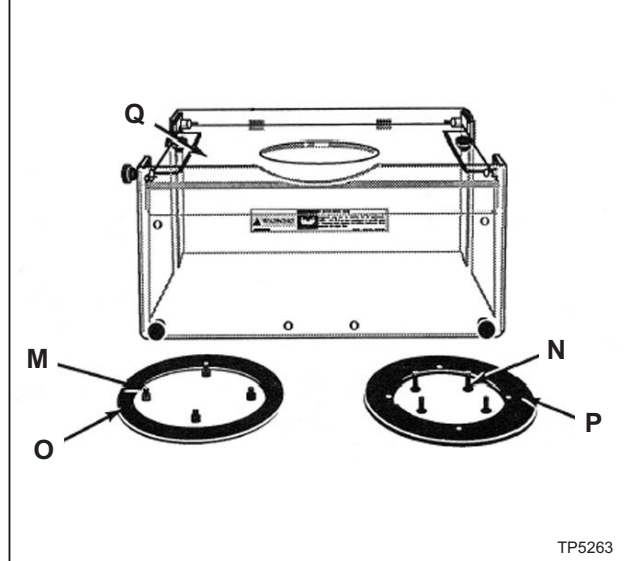


Figure I.II - Spindle Guard Assembly

TP5263

Code No. 11191200 – R-8 Shield Assembly

ITEM	CODE	DESCRIPTION	QTY
A	11011031	Screw, Socket Hd Cap, .250"-20 x .625"	2
B	12191201	Ring, Guard	1
C	11191204	Shield, Left Side	1
D	11191206	Shield Assy, Top	1
E	11665810	Screw, Button Hd Cap, #10-32x.750"	3
F	11010065	Washer, Plastic, #10-32	8
G	11010055	Nut, Stop, Plastic, #10-32	3
H	11010063	Screw, Drive, Type U, #12 x .625"	2
I	11191205	Shield, Right Side	1
J	11191203	Assembly, Rear Shield	1
K	11121202	Assembly, Front Shield	1
L	11010056	Screw, Hand, #10-32 x .750"	4

Code No. 11190341 – Quick Change Shield Assembly

ITEM	CODE	DESCRIPTION	QTY
A	11011031	Screw, Socket Hd Cap, .250"-20 x .625"	2
C	11191204	Shield, Left Side	1
E	11665810	Screw, Button Hd Cap, #10-32x.750"	3
F	11010065	Washer, Plastic, #10-32	8
G	11010055	Nut, Stop, Plastic, #10-32	3
H	11010063	Screw, Drive, Type U, #12 x .625"	2
I	11191205	Shield, Right Side	1
J	11191203	Assembly, Rear Shield	1
K	11121202	Assembly, Front Shield	1
L	11010056	Screw, Hand, #10-32 x .750"	4
M	11651199	Screw, Button Hd Cap, #10-32 x .500"	4
N	11980224	Screw, Socket Hd Cap, #8-32 x .625"	4
O	12190330	Ring, Guard	1
P	12190331	Ring, Guard	1
Q	11191207	Shield Assy, Top	1

